

Note: Windows 2000 or Windows XP Instructions begin on page 2

To Install the ENCAD driver in Windows NT :

1. If the Add New Hardware Wizard appears on boot up of your computer, click CANCEL
2. Uninstall any ENCAD drivers that you have currently installed in your Printers folder.
3. Save the driver file to your Desktop
4. Double Click on compressed driver file to extract the driver
5. Go into the PRINTERS folder of your Operating System, which can be accessed by going to START, SETTINGS, PRINTERS.
6. Choose ADD A PRINTER.
7. Designate what port to which the printer is connected whether it is a print server address or an LPT parallel port.
8. At the list of Manufacturers and Models, Choose HAVE DISK.
9. Choose BROWSE and direct the Wizard to the folder C:\ENCAD\Drivers\Version_5105.
10. Click OK twice to bring up the revised list of Manufacturers and Models.
11. Choose your ENCAD printer from the list.
12. Continue the install as you would any printer.
13. If you get a message box to insert an NT 4.0 disk, just Click OK.
14. You will get a message box stating that a file is needed, choose BROWSE and direct the wizard to the folder C:\ENCAD\Drivers\ Version_5105.
15. Choose the .mdf file that corresponds to your printer.
16. Click Finish.
17. After the driver is installed, go into Printing Preferences, click on About This Printer, and verify that the version number next to the file ENW2KUD.DLL is 5.1.0.5.

To Install the ENCAD driver in Windows 2000 or Windows XP :

1. If the Add New Hardware Wizard appears on boot up of your computer, click CANCEL
2. Uninstall any ENCAD drivers that you have currently installed in your Printers folder.
3. Save the driver file to your Desktop
4. Double Click on downloaded file to expand the driver files to C:\ENCAD\Drivers\Version_5105.
5. Go into the PRINTERS folder of your Operating System, which can be accessed by going to START, SETTINGS, PRINTERS.
6. Choose ADD A PRINTER.
7. Designate what port to which the printer is connected whether it is a print server address or an LPT parallel port.
8. At the list of Manufacturers and Models, Choose HAVE DISK.
9. Choose BROWSE and direct the Wizard to the folder C:\ENCAD\Drivers\Version_5105.
10. Click OK twice to bring up the revised list of Manufacturers and Models.
11. Choose your ENCAD printer from the list.
12. Continue the install as you would any printer.
13. When you click Finish, a digital signature or compatibility message box will appear, choose Yes.
14. Click Finish again.
15. If you get a message box to insert an NT 4.0 disk, just Click OK.
16. You will get a message box stating that a file is needed, choose BROWSE and direct the wizard to the folder C:\ENCAD\Drivers\ Version_5105.
17. Choose the .mdf file that corresponds to your printer.
18. Click Finish.
19. After the driver is installed, go into Printing Preferences, click on About This Printer, and verify that the version number next to the file ENW2KUD.DLL is 5.1.0.5.