
 
 







 
 



## Keyboard hotkeys

Some keys on the keyboard are printed with icons. These keys are called hotkeys and can be pressed alone or in combination with the Fn key to access certain Windows functions or settings quickly. The functions of hotkeys are symbolized by the icons printed on them.

Hotkey	Function
	Mutes/Unmutes sound.
	Decreases system volume.
	Increases system volume.
	Enables/Disables the integrated microphone.
	Reloads Web pages or refreshes the screen.
	Enables/Disables the touchpad.
	Turns on/off airplane mode.
	Enables/Disables the integrated camera.
	Locks the screen.
	Switches display devices.
	Increases screen brightness.
	Decreases screen brightness.
	Turns on/off or adjusts the brightness of the keyboard backlight. <b>Note:</b> This hotkey must be used with the Fn key.

## Hotkey mode

Some hotkeys share keys with functions keys (F1 to F12). The hotkey mode is a UEFI/BIOS setting that changes how hotkeys (or function keys) are used.

Hotkey mode setting	How to use hotkeys	How to use function keys
Disabled	Hold down the Fn key and press one of the hotkeys.	Press the function keys directly.
Enabled	Press the hotkeys directly.	Hold down the Fn key and press one of the function keys.

**Note:** Hotkeys that do not share keys with function keys are not affected by the hotkey mode setting. They should always be used with the Fn key.